



JOHANSON DIELECTRICS INC.

15191 Bledsoe Street, Sylmar, Ca. 91342 Phone (818) 364-9800 Fax (818) 364-6100

Corona Effects and Their Impact on PWB Layout Induced HiPot Failures

John Maxwell Director of Product Development

Background

Understanding corona interactions between PWB and components is essential to design board layouts that are robust with minimum corona related failures during HiPot testing and operation in a system. Understanding high voltage physics becomes important in understanding root cause of failure and effective corrective action when failures occur. Most research effort in the area of corona discharge has been performed in the high voltage power transmission industry. Dielectric or insulator degradation results when arcing occurs during corona discharge resulting in failure. Repeated corona or partial discharges can lead to dielectric or insulator wear out and eventual material failure making understanding the phenomena critical in designing high reliability systems.

Definition of Terms

- 1) Ceramic: Metal oxide compounds
- 2) Corona Inception Voltage or CIV: The voltage where arcing occurs
- 3) Dielectric: A non conducting material used to constrain the electric field and to provide charge storage.
- 4) Dielectric Strength: The rupture voltage where thermal electrons within the material gain enough energy in the electric field to generate many more additional electrons through impact with atoms within the material. The current avalanches at this voltage.
- 5) Ionized Gas: Molecules where electrons have become stripped from the atoms
- 6) ϵ Relative dielectric constant
- 7) ϵ_{air} 1
- 8) $\epsilon_{\text{dielectric}}$ Approximately 4-5
- 9) $\epsilon_{\text{capacitor}}$ Typically > 2000 for X7R Dielectrics
- 10) Partial Discharge: Corona discharge within a dielectric material or structure
- 11) Paschen's Minimum: the minimum corona inception voltage (CIV) between two closely spaced conductors separated by dielectric and is approximately 330V at 1 atmosphere in air.
- 12) Quench Voltage: The voltage where arcing is extinguished, less than Paschen's Minimum voltage.
- 13) Pseudo or Phantom Electrode: A dielectric structure that acts like a metallic electrode due to either shape, high dielectric constant or both
- 14) Streamer Discharge: A long duration (>100nS) characterized by large discharge area and high charge transfer (>120pC at CIV).
- 15) Townsend Discharge: Short duration (<10nS) characterized by small area and low charge transfer (<100pC at CIV).



JOHANSON DIELECTRICS INC.

15191 Bledsoe Street, Sylmar, Ca. 91342 Phone (818) 364-9800 Fax (818) 364-6100

PWB Considerations

The primary consideration in PWB (Printed Wiring Board) design is establishing acceptable spacing or creepage to meet regulatory requirements and is usually limited to conductor spacing on a board surface. Problems arise though when components are placed over those conductors during assembly. Dielectric constant of and spacing between dielectric layers of solder mask, flux residue, air and conductors all come into play when we evaluate corona events during HiPot testing. Figure 1 shows a typical layout that causes problems during HiPot testing. This is a two dimensional representation of a more complex three-dimensional problem.

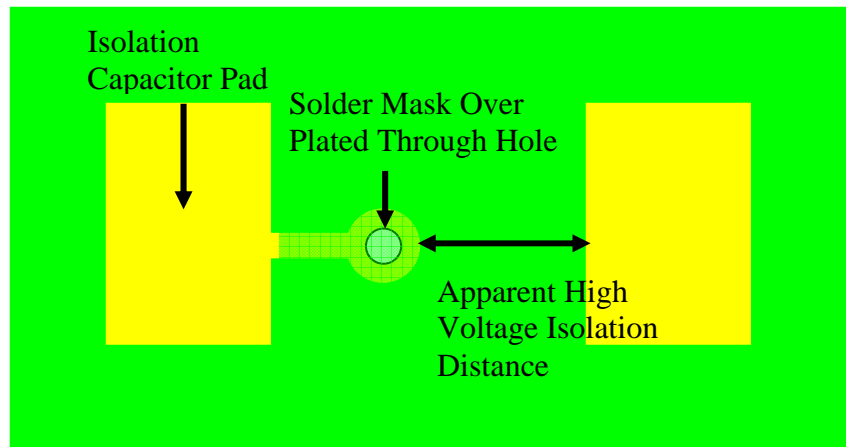


Figure 1. Two Dimensional PWB Layout Considerations

Figure 2 shows the relationship between isolation capacitor, capacitor pads and plated through hole via to inner layers of the PWB. This is where problems arise because the capacitor's high dielectric constant causes the ceramic dielectric body appear to be a pseudo or phantom electrode greatly reducing the high voltage isolation distance. In this case we now depend the rupture voltage properties of the solder mask to provide isolation between the capacitor body and opposing pad. Solder mask is specifically not designated as a dielectric material and designers cannot depend on solder mask providing high voltage isolation.

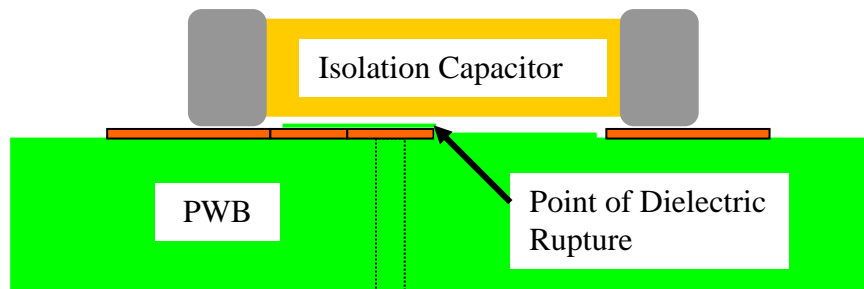


Figure 2. Isolation Capacitor Mounted With Trace between Pads



JOHANSON DIELECTRICS INC.

15191 Bledsoe Street, Sylmar, Ca. 91342 Phone (818) 364-9800 Fax (818) 364-6100

The capacitor is coupled to the copper trace on one side with the capacitor body acting as the opposing pseudo electrode on the other. Now solder mask thickness only isolates high voltages encountered during operation or HiPot testing. Voltage across those coupling capacitors is a function of capacitor area, dielectric constant, spacing and applied voltage. A voltage divider network is formed between pad and pseudo electrode. Figure 3 shows the relationship between pad, solder mask, spacing between capacitor body and pad. Figure 4 is of the coupling capacitors between pad and capacitor body pseudo electrode.

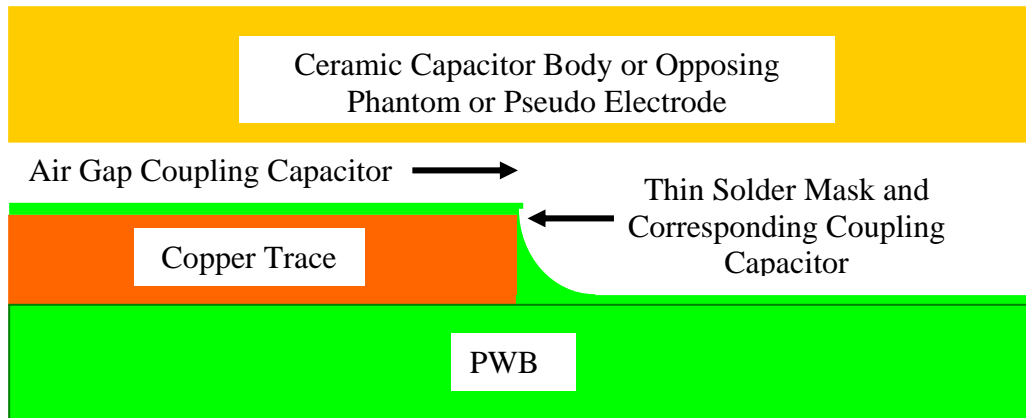


Figure 3. Relationship between Pad, Air Gap and Capacitor Body (Pseudo Electrode)

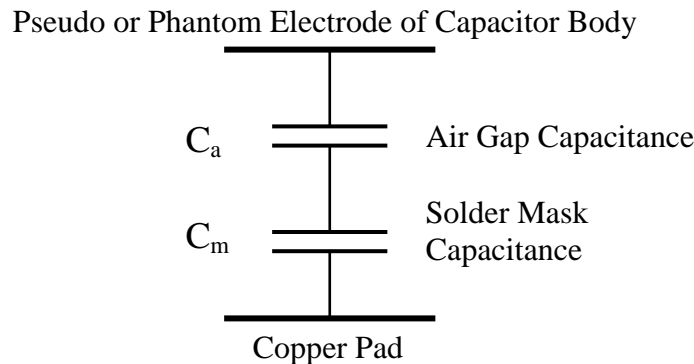


Figure 4. Voltage Divider Capacitors

Problems begin when two conditions are present, thin solder mask coverage over the pad edge and when the voltage across the air gap between solder mask and capacitor body pseudo electrode exceeds Paschen's minimum. The low dielectric constant of air results in most of the applied voltage being dropped that capacitor C_a and a smaller voltage being dropped across the solder mask capacitor C_m . At that voltage Townsend partial discharges will occur across that air gap. During discharge the voltage across the air gap capacitor collapses due to air ionizing resulting in the entire applied voltage being across the solder mask dielectric. This can easily exceed the rupture voltage of this material resulting in a direct high voltage short. If any pad metallization becomes exposed due to Townsend partial discharges then a much larger streamer discharge occurs creating a



JOHANSON DIELECTRICS INC.

15191 Bledsoe Street, Sylmar, Ca. 91342 Phone (818) 364-9800 Fax (818) 364-6100

volume of ionized gas trapped between the capacitor body and PWB surface. This trapped ionized gas supports current conduction and depending on the distance between where the first discharges occurred and opposing isolation capacitor pad the arc may extinguish or jump to that opposing pad on the PWB. Available charge, quench voltage, capacitor surface chemistry and physical distance to the opposing pads are factors that determine if the arc will reach to the opposing pad.

An example of this type of failure is shown in Figures 5 and 6. Both the capacitor bottom and PWB surface are shown. The point of arc inception (A) is clearly visible in both photos.

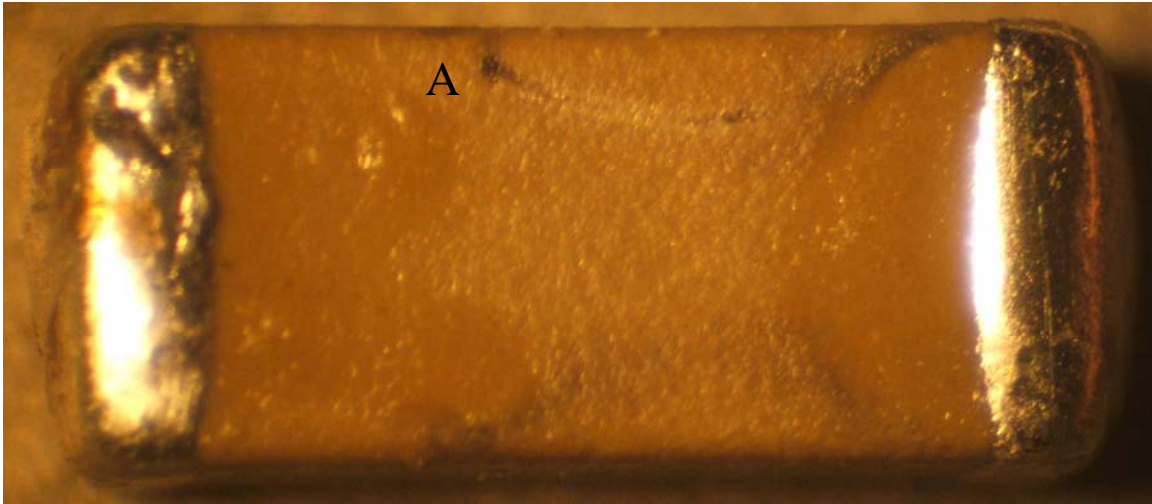


Figure 5. Bottom of Capacitor

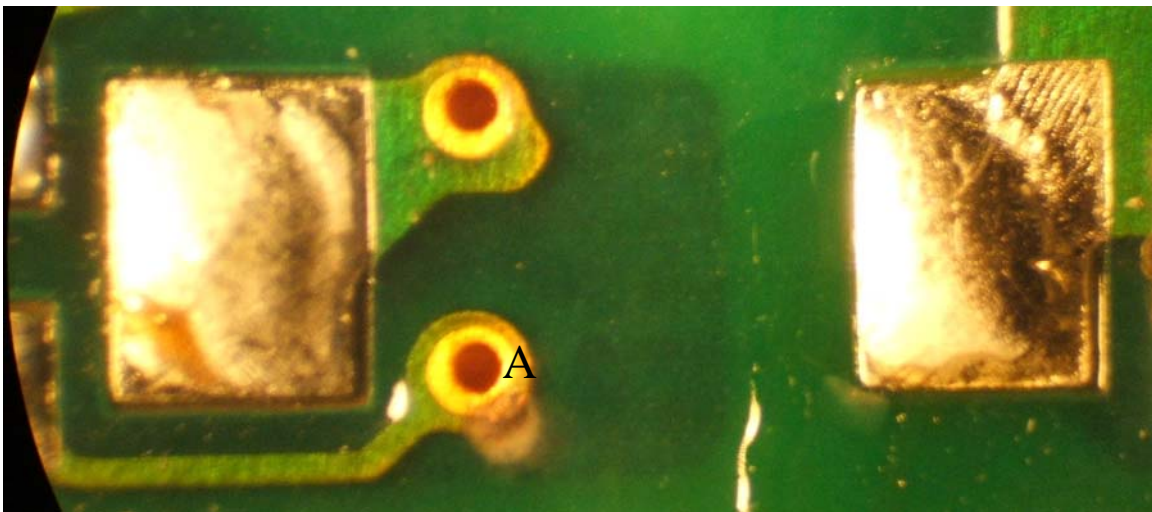


Figure 6. Corresponding PWB pads and Plated Thru Holes

Ceramic capacitors are made with sintered grains or crystals on metal oxides. These ceramic dielectric materials are not insulators but polycrystalline semiconductor materials



JOHANSON DIELECTRICS INC.

15191 Bledsoe Street, Sylmar, Ca. 91342 Phone (818) 364-9800 Fax (818) 364-6100

with nonlinear voltage current relationships. The presence of these metal crystals, surface smoothness, dielectric constant and air or ionizing gas practically limits the physical size of high voltage isolation capacitors. Typical safety capacitors are case size 1808 or 180 mils long and 80 mils wide to meet these high voltage creepage distances.

Conclusions

Two-dimensional PWB layout techniques cannot be used when ceramic isolation capacitors are used. No trace or plated through holes can be placed between those isolation capacitor pads for the reasons discussed. We have to evaluate and understand the impact of adding a high k dielectric layer directly over any trace or pad and how it dramatically reduces isolation distances by acting as a pseudo electrode.

Notice: Specifications are subject to change without notice. Contact your nearest Johanson Dielectrics Sales Office for the latest specifications. All statements, information and data given herein are believed to be accurate and reliable, but are presented without guarantee, warranty, or responsibility of any kind, expressed or implied. Statements or suggestions concerning possible use of our products are made without representation or warranty that any such use is free of patent infringement and are not recommendations to infringe any patents. The user should not assume that all safety measures are indicated or that other measures may not be required. Specifications are typical and may not apply to all applications.